



Nicenjoy Phone Case

Challenge Series



[User manual](#)

Brand name: Nicenjoy

Product information :

Producer: Shanghai Peiqiu Tech Co., Ltd

MFG: Shanghai NKU new energy Tech Co., Ltd

Material: PC + TPU

Made in China




Application phone model :

iPhone 13、 iPhone 13 Pro、 iPhone 13 Pro Max;

iPhone 14、 iPhone 14 Pro、 iPhone 14 Pro Max;

iPhone 15、 iPhone 15 Pro、 iPhone 15 Plus、
iPhone 15 Pro Max.

Button introduce

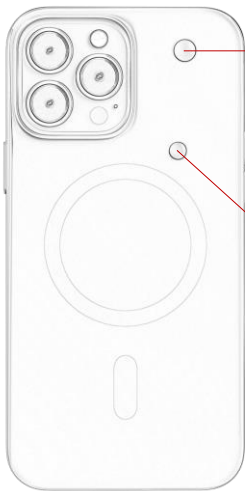

Can be customized based on user preferences.

Usually set as a one-click photo shortcut. Can be customized based on user preferences.

Product function introduce :

1. One-click Capture: Capture amazing moments anytime and anywhere, making your photo and video shooting more convenient, efficient, and fun! No need for complicated operations, just press the button to open the camera app, press again to take a photo, and long press to start recording.

2. MagSafe Magnetic Attachment: Strong magnetic force for precise wireless charging.

3. One-click App Launch: Meet different needs with one-click access to any app like transit codes, payment codes (collection codes), scan codes, one-click recording, and more.

4. This phone case does not need to be charged separately. When you charge your iPhone with a wired or wireless charger, the case charges automatically.

5. The standby time of this phone case is approximately 15-20 days. Please charge your iPhone for 8 hours at least every two weeks with the case on. When using a wireless charger, make sure it is MFI-certified. Non-MFI chargers may cause overheating, which is an issue with the charger, not the phone case.

Q&A

1. If the nicenjoy app interface redirects to the shortcuts app when connecting Bluetooth by long-pressing the button for 8 seconds, please do not release the button until 8 seconds and reopen the nicenjoy app to complete the connection.

2. Enabling Bluetooth increases power consumption regardless of whether it is connected to our device. The phone case has a built-in battery that consumes its own power, not the phone's power.

3. Why is there no indication or display of battery power when charging the phone case?

Only MFI-certified devices can display battery power. We will strive to obtain MFI certification in the future.

4. Overheating Issue with Qi Charger:

The phone overheats when using a Qi charger. We recommend using Apple-certified (MFI) chargers, especially for wireless charging. Using non-MFI certified chargers may cause overheating.

5. Cannot Add Shortcuts:

Please open “shortcuts” app and allow this app run on your iphone. Then you can add shortcuts.

Please upgrade iOS to the latest system, this will solve most of the problems.

Please feel free to contact us if there is a problem or if you have any ideas on how to improve the function of this phone case by sending us an email at :

support@aumonster.com.



Please press and hold for
2 seconds to turn on.

Please press and hold for
15 seconds to turn off.

11:03



FaceTime



Find My



Calendar



Mail



TV



Notes



Reminders



Clock



Podcasts



Maps



Shortcuts



Health



Wallet



Music



Files



Weather



Photos



App Store



Settings



Nicenjoy



13:51



Settings

 Airplane Mode

 Wi-Fi NKU >

 Bluetooth On >

 Cellular No SIM >

 Notifications >


 Sounds & Haptics >

 Focus >

 Screen Time >

 General >


 Control Center >

 Display & Brightness >

 Home Screen & App Library >

 Accessibility >

 Wallpaper >

 StandBy >

 Siri & Search >

 Face ID & Passcode >

13:59



< Settings

Bluetooth


Bluetooth



This iPhone is discoverable as "iPhone" while Bluetooth Settings is open.

DEVICES 

nicenjoy_1801

To pair an  Watch with your iPhone, go to the [Apple Watch app](#).

15:48



 < Settings

Bluetooth

Bluetooth



This iPhone is discoverable as "iPhone" while Bluetooth Settings is open.

MY DEVICES

nicenjoy_1801

Connected 

OTHER DEVICES

To pair an Apple Watch with your iPhone, go to the [Apple Watch app](#).

13:51



Settings

 Airplane Mode

 Wi-Fi NKU >

 Bluetooth On >

 Cellular No SIM >

 Notifications >


 Sounds & Haptics >

 Focus >


 Screen Time >

 General >

 Control Center >

 Display & Brightness >

 Home Screen & App Library >

 Accessibility >

 Wallpaper >

 StandBy >

 Siri & Search >

 Face ID & Passcode >







14:01











< Settings

Accessibility

VISION

-  VoiceOver Off >
-  Zoom Off >
-  Display & Text Size >
-  Motion >
-  Spoken Content >
-  Audio Descriptions Off >

PHYSICAL AND MOTOR

-  Touch >
-  Face & Attention >
-  Switch Control Off >
-  Voice Control Off >
-  Side Button >
-  Control Nearby Devices >
-  Apple TV Remote >
-  Keyboards >

HEARING

-  Hearing Devices >

14:26



< Accessibility

Touch

AssistiveTouch

Off >

AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an adaptive accessory.

Reachability



Swipe down on the bottom edge of the screen to bring the top into reach.

Haptic Touch



Press on the display using a different length of time to reveal content previews, actions and contextual menus.

Touch Accommodations

Off >

If you have trouble using the touch screen, adjust the following settings to change how the screen will respond to touches.

Tap or Swipe to Wake



Wake and unlock iPhone when you tap the display or swipe up from the bottom edge of the Lock screen.

Shake to Undo



If you tend to shake your iPhone by accident, you can disable Shake to Undo to prevent the Undo alert from appearing.

Vibration



When this switch is off, all vibration on your iPhone will be disabled, including those for earthquake, tsunami and other emergency alerts.

14:27



< Touch

AssistiveTouch

AssistiveTouch



AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an additional accessory.

1



Customize Top Level Menu >



CUSTOM ACTIONS

Single-Tap

Open Menu >

Double-Tap

None >

Long Press

None >

You can close the "assistivetouch menu" by turning off "2".

Idle Opacity

40% >

POINTER DEVICES

Devices >

Mouse Keys >

Show Onscreen Keyboard



2

Always Show Menu



16:41

97

Touch

AssistiveTouch

AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an adaptive accessory.

Customize Top Level Menu

CUSTOM ACTIONS

Single-Tap

Open Menu

Double-Tap

None

Long Press

None

Custom actions allow you to interact directly with the AssistiveTouch icon without opening the menu.

CUSTOM GESTURES

POINTER DEVICES

Devices

Mouse Keys

Show Onscreen Keyboard

Always Show Menu

The AssistiveTouch menu will be hidden when the device is connected.

If you need to hide "AssistiveTouch", you can turn off step "1".

1

14:29



< Touch

AssistiveTouch

AssistiveTouch



AssistiveTouch allows you to use your iPhone if you have difficulty touching the screen or if you require an adaptive accessory.

Customize Top Level Menu >

CUSTOM ACTIONS

Single-Tap

Open Menu >

Double-Tap

None >

Long Press

None >

Custom actions allow you to interact directly with the AssistiveTouch icon without opening the menu.

CUSTOM GESTURES

Create New Gesture... >

Custom gestures allow you to record gestures that can be activated from Custom in the Menu.

Idle Opacity

40% >

POINTER DEVICES

Devices >

Mouse Keys >

Show Onscreen Keyboard



14:29



< AssistiveTouch

Devices

CONNECTED DEVICES

nicenjoy_1801



Bluetooth Devices...



AssistiveTouch allows you to connect Bluetooth and USB assistive pointer devices, such as joysticks and mice.



14:53



< nicenjoy_1801

Button 5

Scroll Right

2

Scroll to Bottom

Scroll to Top

Scroll Up

DWELL CONTROLS

Enable/Disable Fallback

Move Menu

Tap

Toggle Pause/Resume Dwell

You can choose any function

SHORTCUTS

Horoscope



Shazam shortcuts

1

Take a Break

Text Last Image

Text Tools

What's a shortcut?

YouTube



indicating that the keys on the phone case are about to be set. At this time, please click (2) the button on the phone case to make the appropriate settings.



14:58



< nicenjoy_1801

Button 4

No

Single-Tap

Secondary Click

Open Menu

Analytics

App Switcher

Camera

Control Center

Double Tap

Hold and Drag

Home

Lock Rotation

Lock Screen

Long Press

Move Menu

Mute

Notification Center

Pinch

Pinch and Rotate

2

You can choose
any function

1



14:28 ↵



< Devices

nicenjoy_1801

Edit

Customize Additional Buttons...

Button 4

Camera >

Button 5

Horoscope >

Button customizations require AssistiveTouch to be enabled.

Complete

Scan the code

to install the APP



NicenJoy (4+)
PeiQiu
App